


INSTALLATION GUIDE

Extract Exhaust Fan

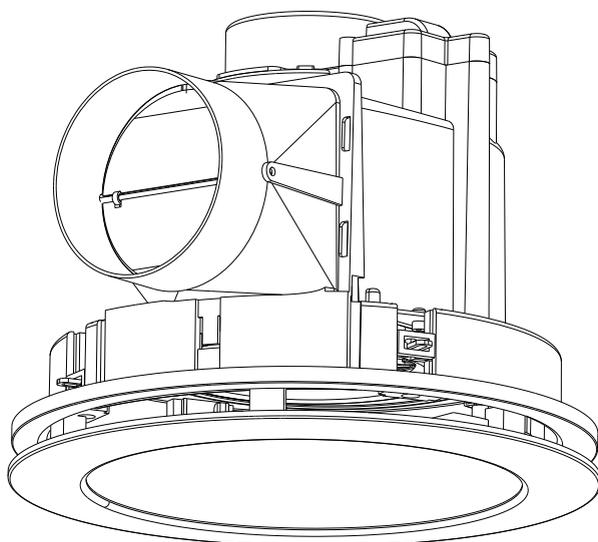

240MM
CUTOUT
DIAMETER

Model Parameters

4S6002WH 30W Exhaust Fan Round 14W Tricolour LED Light Matt White

Rated Voltage	220V-240V
Rated Frequency	50Hz
Exhaust Fan Power Wattage	30W
Lighting Wattage /Type	14W LED
Rated Total Power	44W
Airflow	320m ³ /h

Airflow volume data is tested in accordance with the ISO standard.

CAUTION
READ INSTRUCTIONS
CAREFULLY FOR SAFE
INSTALLATION AND HEATER
OPERATION



MUST BE
INSTALLED BY
A LICENSED
ELECTRICIAN

SAFETY PRECAUTIONS

Dear customers,

Thank you for selecting our Exhaust Fan. Please read all instructions before commencing installation.

IMPORTANT: This unit must be installed to comply with the appropriate council regulations and the Australia and New Zealand wiring rules AS/NZS3000:2000 or latest edition thereof.

The main supply and interconnecting cables required for installation of this unit are not included

WARNING - INSTALLATION ONLY TO BE BY QUALIFIED PERSONS

NB: This product is for indoor installation only.

*Unit must be installed into a horizontal location, not suitable for wallmount or raked ceilings

*Check ceiling cavity for hidden beams, structures and concealed electrical cabling prior to installation

*Unit should not be installed directly above shower or bath cubicles or in any location where splashed water can contact the unit, or the switch can be reached and turned on by someone within a bath or shower

*Position fan in a central location to maximise ventilation to all areas

*Ensure air is ventilated to an outside location (not into roof cavities) via the use of a duct/grill assembly which is not supplied

*Do not install the exhaust fan within 1m distance from a ceiling or wallmounted heat source

*Exhaust fans may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of an exhaust fan such as a partition fan or a duct fan the operation of open flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur

*The minimum clearance distance from the top of the luminaire to any normally flammable building element is 100mm

*The minimum clearance distance from the top of the luminaire to any building insulation is 100mm

*The minimum clearance distance from the side of the luminaire to any normally flammable building element is 250mm

*The minimum clearance distance from the side of the luminaire to any building insulation is 250mm

INSTALLATION

NB: Installation MUST carry out by a qualified and licensed electrician.

- *Turn OFF mains power
- *Ensure Location Instructions (see front page) are followed.
- *Mark and cut a Ø240mm hole into the ceiling using proper tools such as plaster saw, jig saw or hole saw

NB: Highly recommended to wear safety glasses to avoid fell from the ceiling into the eyes.

- *If ducting is required for ventilation. Install a 100mm duct pipe to the exhaust fan and lay the ducting across the ceiling and onto a suitable 100mm exhaust vent (see figure 1)
- *Plug the cable into the power point socket in the ceiling (see figure 2)
- *Position fan in hole, rotate mounting screws with a screwdriver until slip blocks firmly secure fan onto ceiling plaster. Do not over-tighten (see figure 3)
- *Replace external cover over fan blades by locating spring hole slots and allowing springs to pull the cover plate up over the fan and onto the ceiling surface

NB: Please ensure yellow label “Tear this seal before using or installing!” is removed from the unit.

- *Turn ON mains power

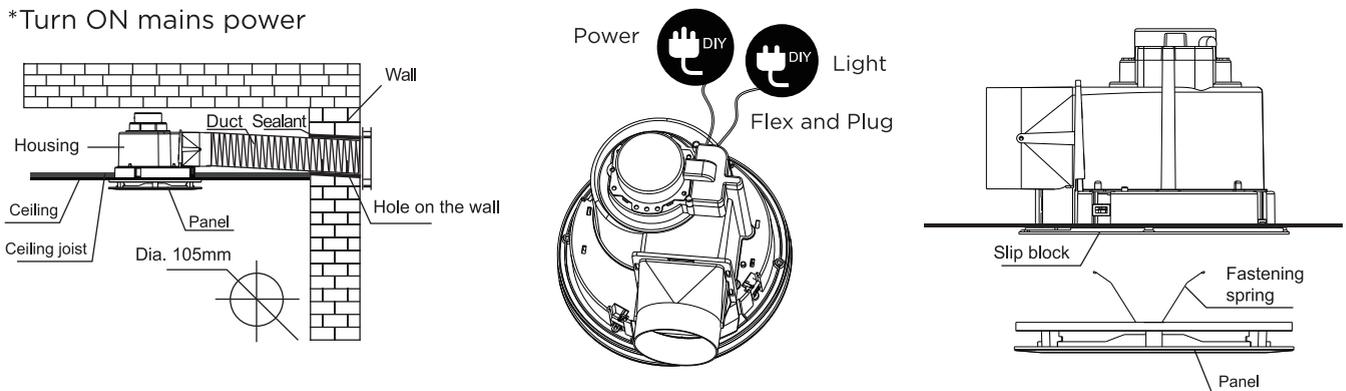


Figure 1: Installing ducting (sold separately) Figure 2: connect the power and Light Figure 3: Fix the fan in place and install cover


Accessories

4 x Internal plastic mounting dust covers (Remove grill as far as safety wire will allow and then fit the dust covers over the 4 internal ceiling mounting points).

Capacity Disclaimer

All capacity figures and technical data provided herein are sourced from the manufacturer. The capacity figures are based on the unit operating in a free-flowing state (not connected to ducting). If you intend to connect this unit to ducting, it is advisable to maintain the duct run as short, straight, and tight as possible.

Wiring Diagram

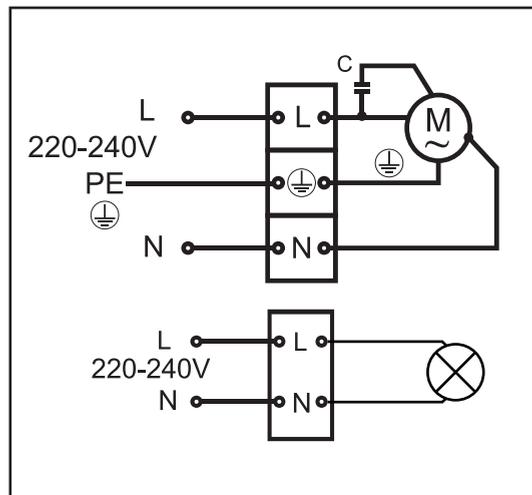

MAINTENANCE

- *The product must be turned OFF and cool before cleaning.
- *To clean the fascia simply use a dampened cloth.

WARRANTY INFORMATION

- *Installation of bathroom heater and exhaust fan **MUST** follow SAA standards and meet local authority regulations.
- ***WARNING – RISK OF OVERHEATING OR FIRE IF THE CLEARANCE DISTANCES ARE COMPROMISED.**
- *Installation **MUST** be carried out by a qualified and licensed electrician.
- *Bathroom heater and exhaust fan **MUST NOT** be installed under any electrical outlet.
- *Bathroom heater and exhaust fan **MUST NOT** be installed near curtains or other combustible materials.
- *Joists, beams and rafters **MUST NOT** be cut or notched to install the product.
- ***DO NOT** attempt to open and repair the product.
- *The warranty is **VOID** if product is not installed according to this installation guide.
- *The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- *Children being supervised not to play with the appliance.
- *The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

For technical support, please contact Four Seasons customer service hotline at **(02) 8778 7570**. This heater is suitable for indoor areas, as defined in our warranty statement. To ensure the heater remains in optimal condition, it should be protected from the elements. Exposure to excessive wind, dust, water, or salt air may cause damage that will not be covered under the warranty. If your heater includes a light, do not remove the light panel, as doing so may cause damage not covered by the warranty. For assistance, feel free to reach out to our customer service team. If you suspect any issues with the installation, please contact your installer to resolve the matter. In case you believe the issue is related to a manufacturing defect, you can file a warranty claim by visiting

<https://fourseasonsliving.com.au/warranty-claim-form/>

IMPORTANT NOTICE: All claims for warranty must be accompanied with the following three documents:

1. Copy of the Installation Receipt OR Tax Invoice OR Certificate of compliance for the installation of the Four Seasons product from the installing electrician.
 2. Copy of the purchase Receipt for the Four Seasons product, and accessories such as extension rod or remote control.
 3. Submit an online warranty claim form. please ensure that the purchaser's full name and contact details are clearly stated. In addition to the full nature of the fault and the serial or P.O. number which can be located on the heater.
- It is the responsibility of the purchaser to keep the documents required for a warranty application for the duration of the warranty period.

**Customer service operates between
8AM to 4PM EST Monday to Friday
Customer service Number: (02) 8778 7570**

